

pure acoustics®

Portable Bluetooth Karaoke Speaker with Disco
Lights
Model: LX-10



User Manual

Thank you for choosing Pure Acoustics. We hope you enjoy any use of this product. We recommend you to read this Operating and Safety document before the first use in order to take the advantage of all features and functions installed. This document should be stored in a safe place for a future use and moved to the next owner of the product.

Care and Safety Guide:

Please turn the speaker off when not in use. If the unit is not used for long periods of time, we recommend that you to disconnect the unit from the power source.

To prevent damage to the speaker do not install in high-heat areas or in areas with direct exposure to the sun beam.

Do not install the speaker near where it may touch rain, moisture, or other liquids. Install the unit on a flat surface with good ventilation. Blocking these vents may cause damage to the speakers due to overheating

To clean the unit, wipe it with a napkin or a dry rag.

WARNING: Do not use liquids, gels, etc. to clean the speaker.

In an unusual case of malfunction do not open the speaker yourself! Contact a qualified professional for proper diagnosis and repair.

pure acoustics®

Technical features:

Bluetooth - wirelessly streaming music to your speaker, suitable for use with iPhone, Android and more

Memory card and USB inputs - Allows you to play music directly from your MP3 memory card. Easy access to files up to 32GB.

Microphone 6.3mm input - allows direct connection to a wired microphone for lecture karaoke and more.

Bass reflex - enriches the bass to a wider and deeper bass sound.


Rechargeable battery - with mAh1200 capacity for use in a portable speaker for up to 8 hours of playtime.

Micro USB Charging socket- 5v can also be loaded through the vehicle or using a backup battery.

FM radio - A digital tuner that including automatic scanning and saving stations in the speaker memory.

Disco Woofer - A 3" element with flashing LED disco lights for a perfect party atmosphere.

Panel:

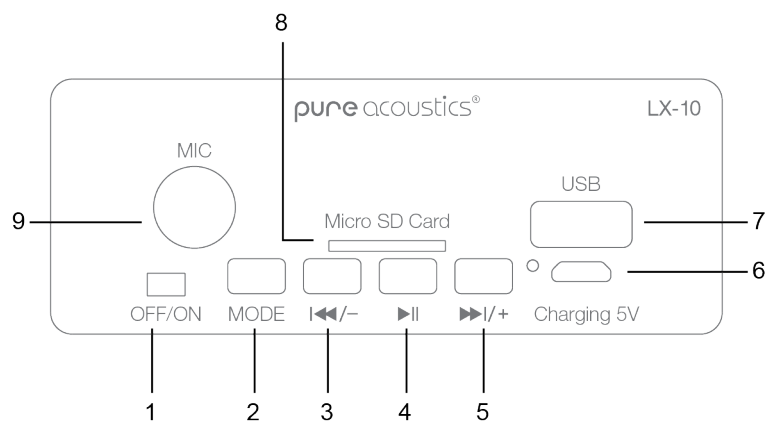

Multimedia panel operation:

Connections

1. ON / OFF switch
2. MODE - transfer between the various functions (BT / USB / SD and FM)
3. A short press to the previous song and a long press reduces the volume.
4. (1) Play / Pause Song Play.
(2) A long press turns the disco lights on / off.
5. A short press to the previous song and a long press to increases the volume.
6. Charging input - MICRO USB DC 5V.
7. USB card input.
8. Micro SD memory card input.
9. Wired microphone input.

Bluetooth Connection

Turn on the speaker with the on / off switch.

Press the MODE button on the panel until you reach Bluetooth Mode, then a sound will be heard.

Keep the distance between the speaker and your Bluetooth device not more than 1 meter while you first connect.

Your Bluetooth device must be set to Scan mode.

Select "PURE LX-10" from the list of scanned devices.

If you are asked to enter a code, press "0000" and select Yes / OK to complete the linking process.

After the speaker has successfully connected, a voice will be heard from the speaker announcing that the wireless connection is ready.

USB or Micro SD Memory Card Input

You can play music from USB memory card or microSD memory card (limited to 32 GB)

Insert the USB flash drive into the USB input and the speaker will play the stored music. If the speaker does not start automatically, press the MODE button to connect to USB mode.

Or

Insert the Micro SD memory card and the speaker will play the stored music. If the speaker does not start automatically, press the MODE button to connect to the Micro SD mode.

FM Radio with Automatic Scanning

Turn on the speaker with the on / off switch.
Press the MODE button on the panel until you reach FM mode.
Click on the buttons Pause, 3 and 5 to scan the radio stations in your region between 87.5-108.0 Mhz frequencies.

Operating the disco lights

The disco lights will work automatically when the speaker is turned on.
To turn off disco lights, press and hold button 4.
To activate the disco lights again, press and hold button 4.

Charging Indicator Icon

While charging, the red LED light turns on – when the device is turned off or pink light when the device is in use - showing that the product is in charge.
When used first, the speaker must be charged for up to 12 hours or until the indicator icon shows full mode.
When the indicator icon starts blinking, the 5V Micro USB cable must be connected to a USB charger. (not included)
The speaker can be turned on while charging.

Technical Specifications:

Power: 8W
Frequency Response: 100Hz-20 KHz +/- 3dB
Impedance: 2Ω
Power Supply and Voltage: 5V Micro USB
Dimensions: 150mm x 100mm x 224mm

Included in package:

Bluetooth Speaker: 1
Micro USB charging cable: 1
English User Manual: 1