

pure acoustics[®]
THE PURE SOUNDS OF LIFE



PMW 1212

User's Manual

Before using your new Speaker Box with amplifier, please read this instruction manual to prevent any damage. Put it away in a safe place for future references.

INSTRUCTIONS

Before connecting the speaker, make sure the system is off and the controls on the minimum level. On the contrary the system
Could damage

- 1.- Plug the polarized cable to electric power and to the speaker
- 2.- Plug the Microphone on the “MIC” input with a 6.3 connector
Or Canon
- 3.- Plug an auxiliary system (CD, DECK, MP3, DVD, etc) on
“LINE IN” input
- 4.- Turn on the systems. A blue LED light up on the speaker to
indicate it is on
- 5.- Set the volume on the middle level on the MIC and LINE IN input
- 6.- Increase little by little the master volume (place on the right side
Of LINE OUT* connector)
- 7.- Set TREBLE and BASS controls to equalize the sound.
- 8.- A red LED light up when the system detects overload power.
You must decrease the volume.
9. With MP3 USB input

Caution

Do not close the microphone to the speaker, it can cause feedback echo and it damage the system

CONTROLS

1. SD Port

2. USB Port

3. MIC1/LINE1 LEVEL

MIC1/LINE1 signals (unbalanced signal) input and signal level control

4. MIC2 (GUTAR) /LINE2 LEVEL

MIC2 (GUTAR)/ LINE2 signals (unbalanced signal) input and a signal level control.

5. LINE IN

(Unbalanced signal) the RCA line input and MP3 signal input of the conversion

6. LINE OUT

(The imbalance signal) RCA line output.

7. LINE IN and MP3

Conversion of the signal input.

8. LCD Display

Displays the current state of the English file names.

9. Function Buttons

USB / SD / FM / BULETOOTH player control keys.

A. Play / Pause:

- a. short press for Play / Pause function
- b. Hold for 3 seconds to enter the folder mode, radio working condition
- c. FM, Scan function automatically search for channels and automatically saved.

B. MODE

USB / SD / FM / BULETDOOTH function of conversion, and the folder exit.

C. circulatory function keys

Single cycle, all cycle, random play three playback mode to switch between

D. upward selection keys

Choose on one or on a channel into the folder mode, select a folder

E. down selection key

to select the next song or the next channel Select the next folder into the folder mode.

10. 5EQ GRAPHIC EQUALIZER

5BAND music effect equalizer icon controller

11. EFFECT

ECHO effect controller (reverb)

12. LINE IN and MP3 signal input level control

13. MASTER

Control the speaker output power

14. 12V external battery connection terminals.

15. Voltage Selector

Change AC Power between 110V and 220V


16. Power Supply Switch.

17. Power Supply Input Connector: Use with power cord

18. The battery charge indicator

Fitted with a 7AH rechargeable battery ,can work about 3.5 hours continuously in normal use.

Make sure all of your equipment is completely OFF and lower ALL VOLUME, LEVEL & GAIN controls before connecting the speaker.

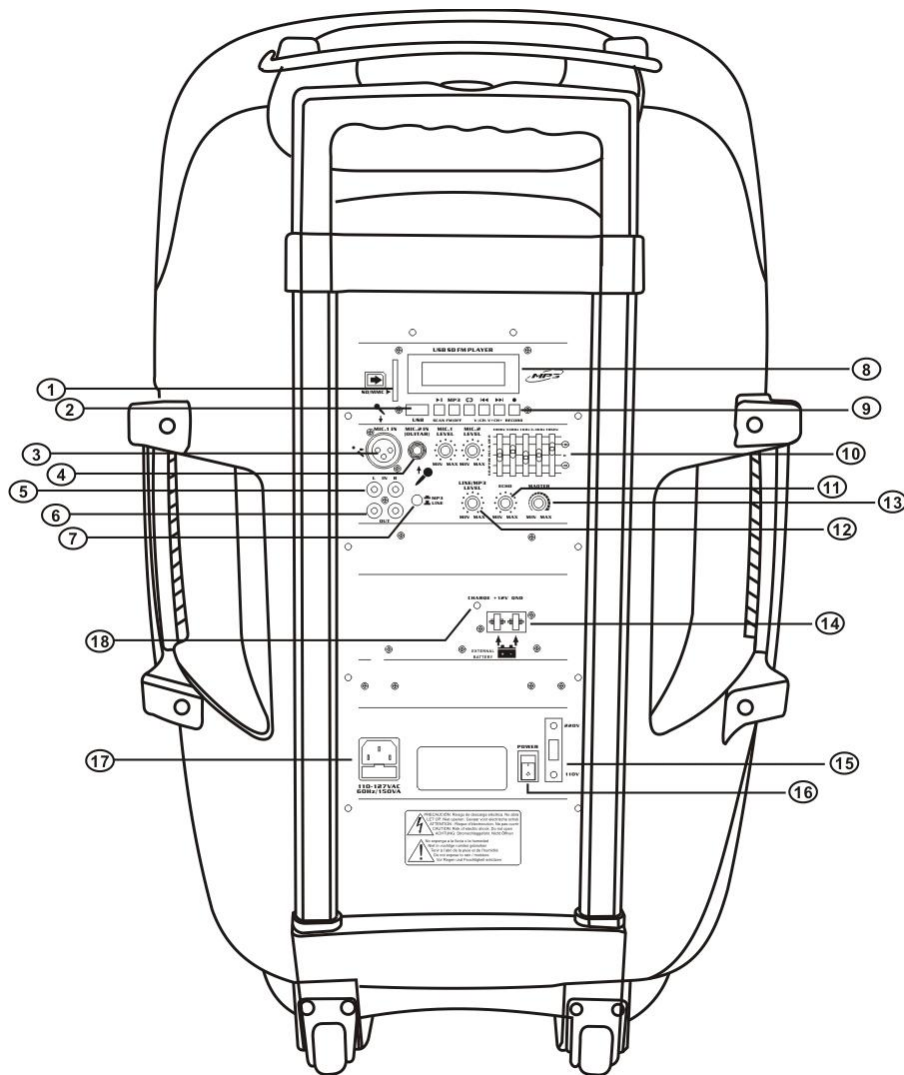

CAUTIONS

- * Do not wet it or expose to leaks or splashes
- * Keep it on fresh places
- * Do not operate it on places with humidity
- * Do not hold drinks on it.