

pure acoustics®



Alarm Clock with Wireless Charging
RDW-75 User Manual

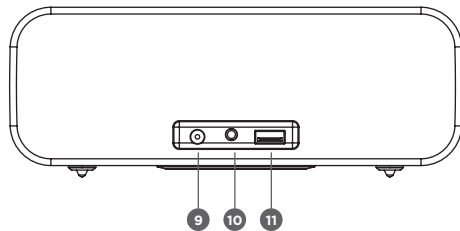
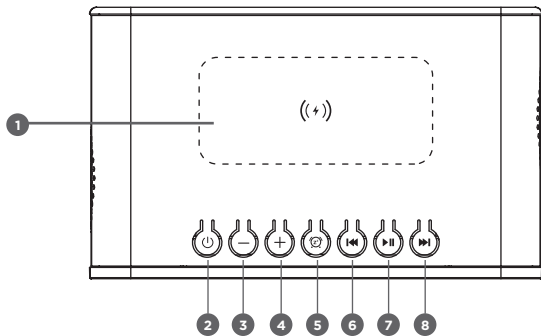


TABLE OF CONTENTS:

1. SAFETY INFORMATION	P. 4
2. TECHNICAL DATA	P. 5
3. DESCRIPTION	P. 6
4. USE	P. 6
5. MAINTENANCE AND CLEANING	P. 9
6. WARRANTY AND LIMITATIONS OF LIABILITY	P. 9

1. SAFETY INFORMATION

Before using this product, carefully read these instructions and keep the user manual for future reference.

1. Before connecting this product to a wall socket, ensure that the local electrical voltage matches the one specified on the nameplate of this product.
2. Use this product in a moderate climate.
3. Only use attachments/accessories specified by the manufacturer.
4. Make sure that there is enough free space around the product for ventilation.
5. The product shall not be exposed to dripping or splashing. Never place liquid containers, such as vases, near the product.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. This product is for indoor use only. Any other use (professional) is excluded.
8. This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the product and its cord out of reach of children less than 8 years.
9. Do not expose the product and accessories to rain or water. Protect the product from excessive heat and extreme temperatures.
10. Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
11. Disconnect the product from the power outlet before lightning storms.
12. Do not expose the product to a strong magnetic field, as it may cause dysfunction.
13. Keep implanted medical devices (cardiac pacemakers, implantable cochleas, etc.) at least 20 cm away from the product (wireless charging area) to avoid potential interference with medical equipment.



14. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

2. TECHNICAL DATA

Power supply	Input: 100 - 240 V~, 50/60 Hz, 1A; output: 12 V $\overline{=}$, 3 A (max)
USB charging (output)	5 V $\overline{=}$, 2.1 A (max)
Wireless charging	Charging output: 5 W
	Charging efficiency: 70 - 75 %
	Transmission distance: \leq 8 mm
Bluetooth V4.2 + EDR	Frequency range: 2402 - 2480 MHz
	Max. transmission power: - 0.58 dBm
	Operating range: Up to 10 m
Operation power	24 W
Standby power	0.9 W
Speaker output	3 W x 2 (max)
Dimensions (W x H x D)/ Weight	200 x 70 x 120 mm/ approx 840 g

3. DESCRIPTION

- | | | | |
|--|---|--|--|
| 1. Wireless charging area | 4. Set alarm timer; activate or deactivate alarm timer; adjust volume during Bluetooth play | 7. Set clock; pause or resume Bluetooth play | 11. USB charging port to charge a device |
| 2. Press and hold to turn the product on or off; select Bluetooth, AUX mode or clock display | 5. Snooze alarm; Adjust display brightness | 8. Adjust minute; skip to previous track during Bluetooth play | |
| 3. Set alarm timer; activate or deactivate alarm timer; adjust volume during Bluetooth play | 6. Adjust hour; skip to next track during Bluetooth play | 9. DC jack; connect to power supply | |
| | | 10. AUX jack (3.5 mm); connect to an external audio device | |

4. USE



4.1 Connect power

WARNING:






- Risk of product damage! Make sure that the power voltage corresponds to the voltage indicated on the product.
- Risk of electric shock! When you disconnect the power cord, always pull the plug, never the cord.

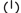1. Connect the supplied power adapter to the DC jack on the product, and then to the wall outlet.

4.2 Turn on

1. Press and hold  to turn on the product.
- To switch the product to standby, press and hold  again.

4.3 Set clock

1. Press repeatedly  to display clock.
2. Press and hold  to activate clock setting mode. Hour and minute digits flash.
3. Press briefly or hold down  to set hour; press briefly or hold down  to set minute.
4. Press  to confirm the clock settings.

To switch between 12 and 24 hour format

When clock is displayed, press **⏪** or **⏩**.

4.4 Set alarm

You can set two alarm timers simultaneously.

1. When clock is displayed, press and hold **—** or **+** to activate alarm setting mode. The alarm icon appears and flashes. The hour and minute digits flash.
2. Press briefly or hold down **⏪** to set hour; press briefly or hold down **⏩** to set minute.
3. Press **—** or **+** to confirm the time settings. Digits for volume flash, prompting you to set alarm volume.
4. Press **⏪** or **⏩** to set alarm volume.
5. Press **—** or **+** again to confirm all the alarm settings. Clock display resumes. The alarm icon is displayed, indicating the alarm timer is activated.

To activate or deactivate alarm timer

Press **—** or **+** to display or cancel the alarm icon. When the alarm icon is displayed, the alarm timer is activated. When the alarm icon is canceled, the alarm timer is deactivated.

To Turn off alarm sound

When alarm rings, you can select one of the methods to stop alarm ringing.

- Press **⌚**. Alarm repeats in 9-minute interval, and it repeats four times.
- Press any button except **⌚**. Alarm repeats only when the set alarm time comes again.

4.5 Play audio from a Bluetooth device

To stream music to this product from your Bluetooth device (e.g. smartphone or tablet) for the first time, you need to pair this product with your Bluetooth device.

1. Press **⏻** to select Bluetooth mode. The **📶** icon flashes, indicating the product is in Bluetooth pairing mode.
2. On you Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired with (see the device user manual for details).
3. Select "Q.1904" on your Bluetooth device to be paired with. When this product is paired with your Bluetooth device, The **📶** icon lights up, no more flashing.
 - After successful pairing, the product is automatically re-connected to your Bluetooth device.
4. Select and play audio files on your Bluetooth device. Audio streams from your Bluetooth device to this product.

To control audio play


- Press **⏸** to pause or resume play.
- Press **+** or **—** to adjust volume.
- Press **⏪** or **⏩** to skip to next or previous track.

Notes:




- The maximum operational range between the product and a Bluetooth device is approximately 10 meters (30 feet).
- The music streaming may be interrupted by obstacles between your Bluetooth device and the product, such as wall, metallic casing that covers the device, or other devices nearby that operate in the same frequency.

4.6 Play audio from an external device

You can listen to an external audio device (e.g. MP3 player) through the speakers of this product.

1. Press repeatedly  to select AUX mode. "AUX" is displayed.
2. Using an audio cable with 3.5 mm plug (not included), connect the AUX jack (3.5 mm) on the product to the headphone jack on your smartphone or MP3 player.
3. Select and play audio files on the connected device. Audio is played through the speakers of this product.

To control audio play




- Press  to pause or resume play.
- Press  or  to adjust volume.

4.7 Charge a device wirelessly

This product has a wireless charging function, able to charge the devices which support wireless charging.

WARNING:

- Operate this product in moderate temperature.
- Do not place any other batteries or metals on the wireless charging area.
- Do not place a magnet or any magnetically sensitive devices (e.g. credit cards) on/near the wireless charging area.
- If the product gets wet, dry it completely before further use.

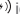1. Make sure this product is turned on.
2. Place a compatible smartphone on the charging surface of this product (marked with the  icon). The charging automatically starts. When charging the smartphone,  flashes slowly. If a smartphone is detected as in-compatible, the  icon flashes fast.

Notes:

- This product is compatible with a smartphone that supports wireless charging.
- To ensure successful wireless charging, place a smartphone in the correct position of the charging area.

4.8 Charge a device through USB

1. Make sure this product is turned on.
2. Using a USB cable (not included), connect the USB port on this product and to your smartphone.

5. MAINTENANCE AND CLEANING

WARNING:

Before cleaning this product, always disconnect this product from the power supply.

- Clean the product using a soft dusting cloth.
- Never use harsh cleaning products. Avoid touching the product with acidic substances.
- Store away from dust and freezing temperatures.

6. WARRANTY AND LIMITATIONS OF LIABILITY

This product is guaranteed for a period of 24 months (defined by local law) from the date of purchase against any failure resulting from manufacturing or material defects.

This warranty does not cover damage caused by improper installation, improper use, or normal wear and tear of the product.

More specifically, the warranty does not cover:

- Damage or problems caused by improper use, accident, alteration or electrical connection of improper intensity or voltage.
- Modified products, those whose warranty seal or serial number have been damaged, altered, removed or oxidized.
- Replaceable batteries and accessories are guaranteed for a period of 6 months.
- Failure of the battery due to overcharging or failure to observe the safety instructions explained in the instruction manual.
- Cosmetic damage, including scratches, dents, or any other element.
- Damage caused by any intervention carried out by an unauthorised person.
- Defects caused by normal wear and tear or due to normal ageing of the product.
- Software updates due to a change in network settings.
- Product failures due to the use of third party software to modify, change or adapt the existing software.
- Product failures caused by use without accessories approved by the manufacturer.
- Oxidised products.

Under no circumstances can the manufacturer be responsible for the loss of data stored on the disk. Similarly, the manufacturer is not required to verify that the SIM/

SD cards are removed from the returned products.

Repaired or replaced products may include new and/or reconditioned components and equipment.

Terms and conditions of implementation:

To obtain a warranty service, you are requested to return your product to the customer service desk of your retail outlet with your proof of purchase (receipt, invoice, ...), the product and its supplied accessories, with its original packaging.

It is important to have the date of purchase, the model and the serial or IMEI number on hand as information (this information usually appears on the product, the packaging or your proof of purchase).

Failing this, you must return the product with the accessories necessary for its proper operation (power supply, adaptor, etc.).

In the event that your claim is covered by the warranty, the after-sales service may, within the limits of local law, either:

- Repair or replace defective parts.
- Exchange the returned product with a product that has at least the same functionality and that is equivalent in terms of performance.
- Refund the product at the purchase price of the product mentioned on the proof of purchase.

If one of these 3 solutions is used, this does not give rise to the extension or renewal of the warranty period.

Pure Acoustics, Inc.
Brooklyn, NY 11215 USA
www.pure-acoustics.com

pure acoustics[®]
THE PURE SOUNDS OF LIFE

RDW-75

Made in China

